


1. RECOMMENDED BRACING SHOULD BE PLACED EVERY 12'-0".
2. RECOMMENDED BRACE THICKNESS:
 - * 8'-0" TO 10'-0" PANEL - 2x4
 - * 12'-0" TO 16'-0" PANEL - 2x6
3. KEEP THE TOP 2x4x12" BLOCK WITHIN 2'-0" FROM THE TOP OF THE PANEL.
- 4.) RECOMMENDED BRACE LENGTH SHOULD BE $\frac{2}{3}$ THE HEIGHT OF THE PANEL.
- 5.) THE BRACING INSIDE AND OUTSIDE SHOULD BE LEFT ASSEMBLED UNTIL THE ROOF IS IN PLACE AND PROPERLY FASTENED.

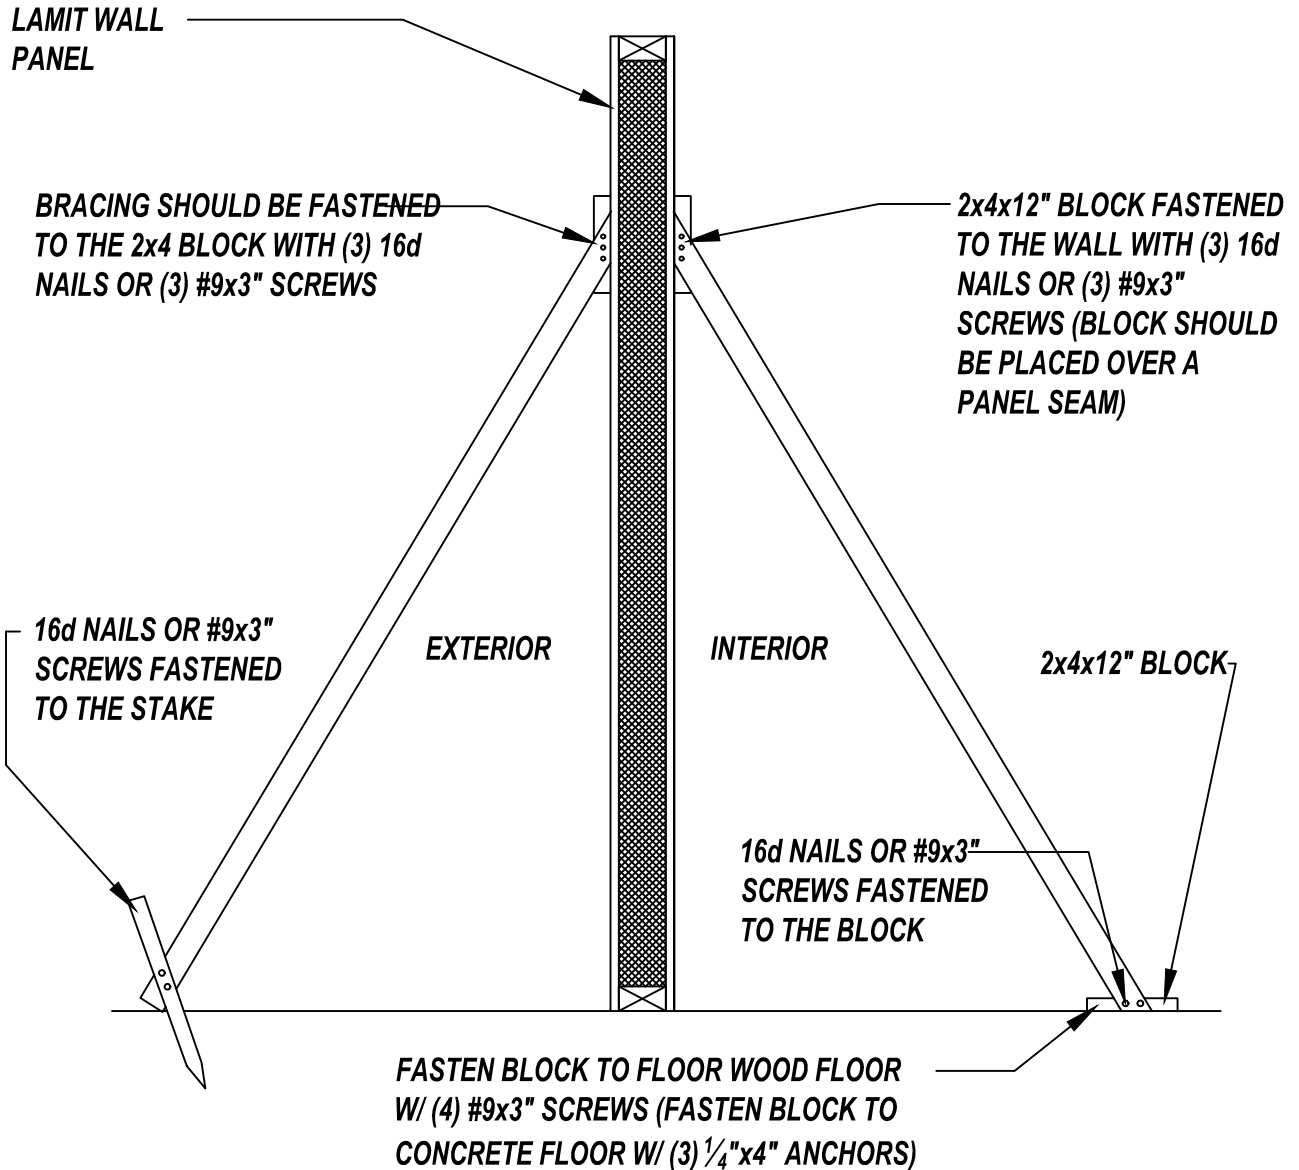

WIND BRACING TIPS

DETAIL NUMBER:

1110

SCALE : NTS

Updated: 2/22/2017

LAMIT INDUSTRIES

**STRUCTURAL INSULATED PANELS
FOR THE BUILDING INDUSTRY**